

30° ADAPTER INSTALLATION INSTRUCTIONS

1. LAY YOUR POUCH ON THE BELT ACCORDING TO THE ORIENTATION OF WHICH WAY YOU WANT YOUR POUCH TO TILT. THEN, LAY DOWN THE 30-DEGREE ADAPTER WITH THE SHORTER STICK POINTING DIRECTLY UP, BUT THE LONGER STICK POINTING PARALLEL TO YOUR POUCH. THE HRT BIRD SHOULD BE FACING THE SAME DIRECTION WHERE YOUR MAGS WILL BE "DRAWN".



2. THERE IS A SLIT ON THE LONGER STICK, FOLD IT ALONG THE SLIT TOWARDS YOURSELF



3. INSERT THE FOLDED STICK AS SHOWN THROUGH THE TOP OF THE POUCH, AND EXIT ON THE 2ND SLOT



4. WEAVE THE LONG STICK BACK INTO THE ADAPTER.



5. THEN WEAVE THE LONG STICK INTO THE 4TH SLOT AS SHOWN.



6. EXIT ON THE 5TH SLOT (THE LAST SLOT RIGHT ABOVE THE LARGER OPENING) FROM THE MAG POUCH, AND BRING IT BACK THROUGH THE GUIDE SLOT ON THE ADAPTER.



7. NOW BRING THE TIP INTO THE LOCKER SLOT.



8. "CLICK" BOTH CORNERS BEHIND THE LOCKER SLOT. IN THIS PHOTO THE RIGHT SIDE IS LOCKED BUT NOT THE LEFT.



30° ADAPTER INSTALLATION INSTRUCTIONS

9. THIS PHOTO SHOWS BOTH ANCHOR CORRECTLY LOCKED.



10. THIS PHOTO SHOWS BOTH ANCHOR CORRECTLY LOCKED.




11. WEAVE THE SHORTER STICK THROUGH YOUR BELT.



12. WITH OUR ARC BELT, MAKE SURE IT IS WOVEN BEHIND THE CORE, NOT JUST THE SLEEVES.



13. CONTINUE TO WEAVE AS SHOWN. IT IS VERY TIGHT BY DESIGN SO THE FINISHED WEAVE WILL NOT SHIFT.

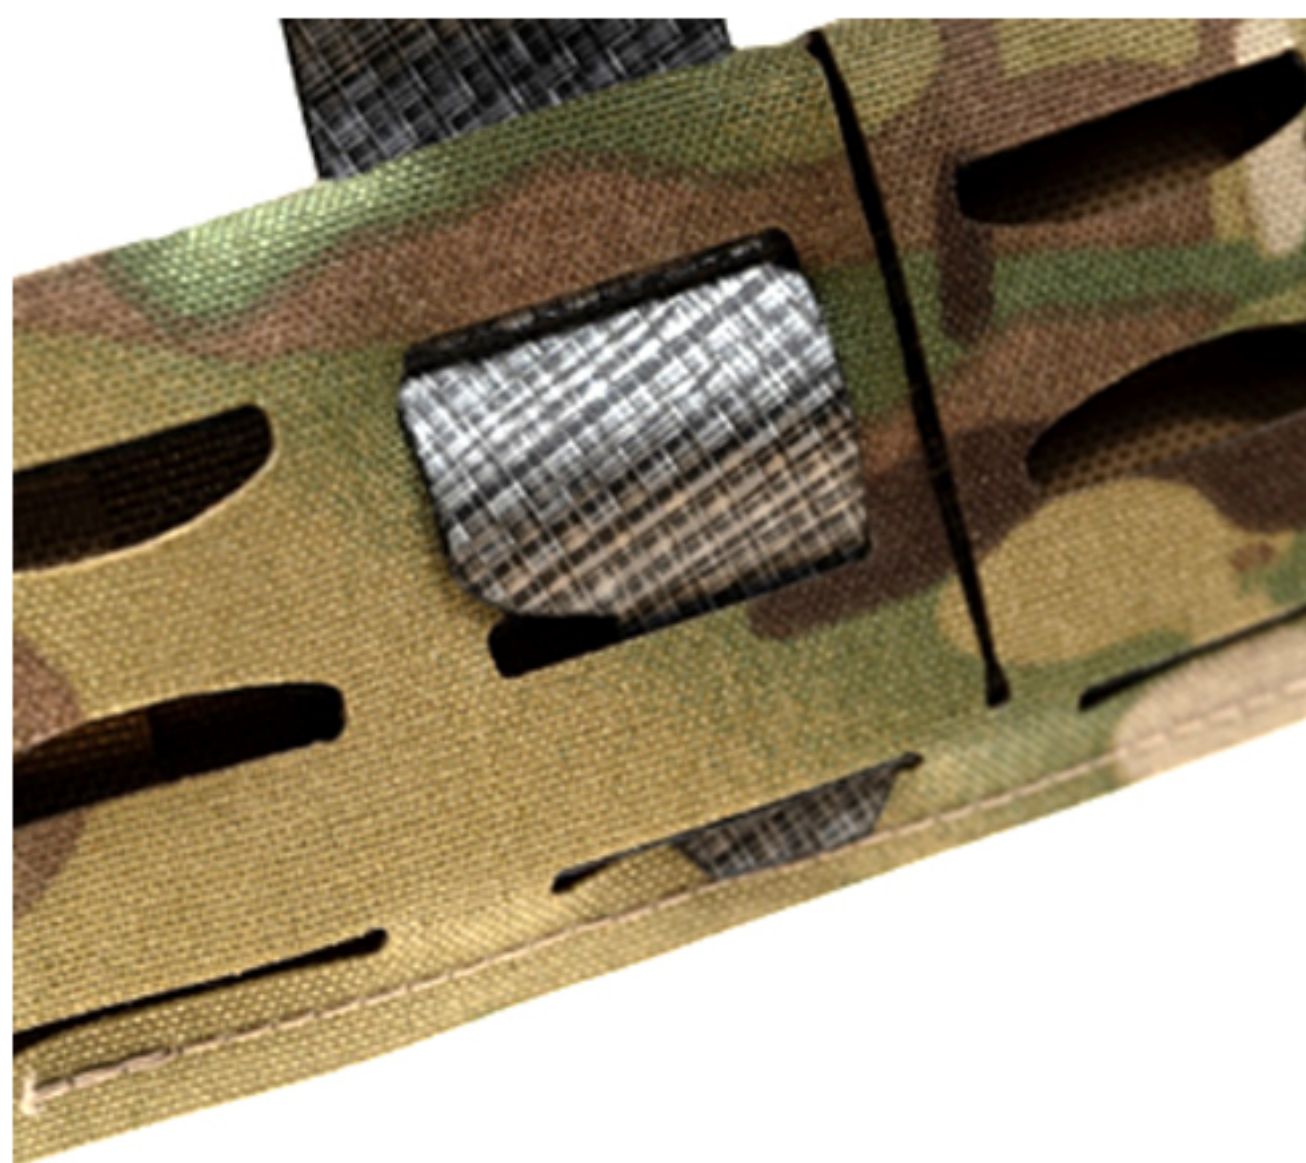

14. EXIT THE BOTTOM, BEHIND THE CORE AGAIN.



15. NOW FOLD THE ENTIRE POUCH OVER.




16. AND INSERT THE TIP INTO THE GUIDE SLOT AGAIN.



30° ADAPTER INSTALLATION INSTRUCTIONS

17. WEAVE THE TIP AROUND TO THE LOCKER SLOT THE SAME WAY.

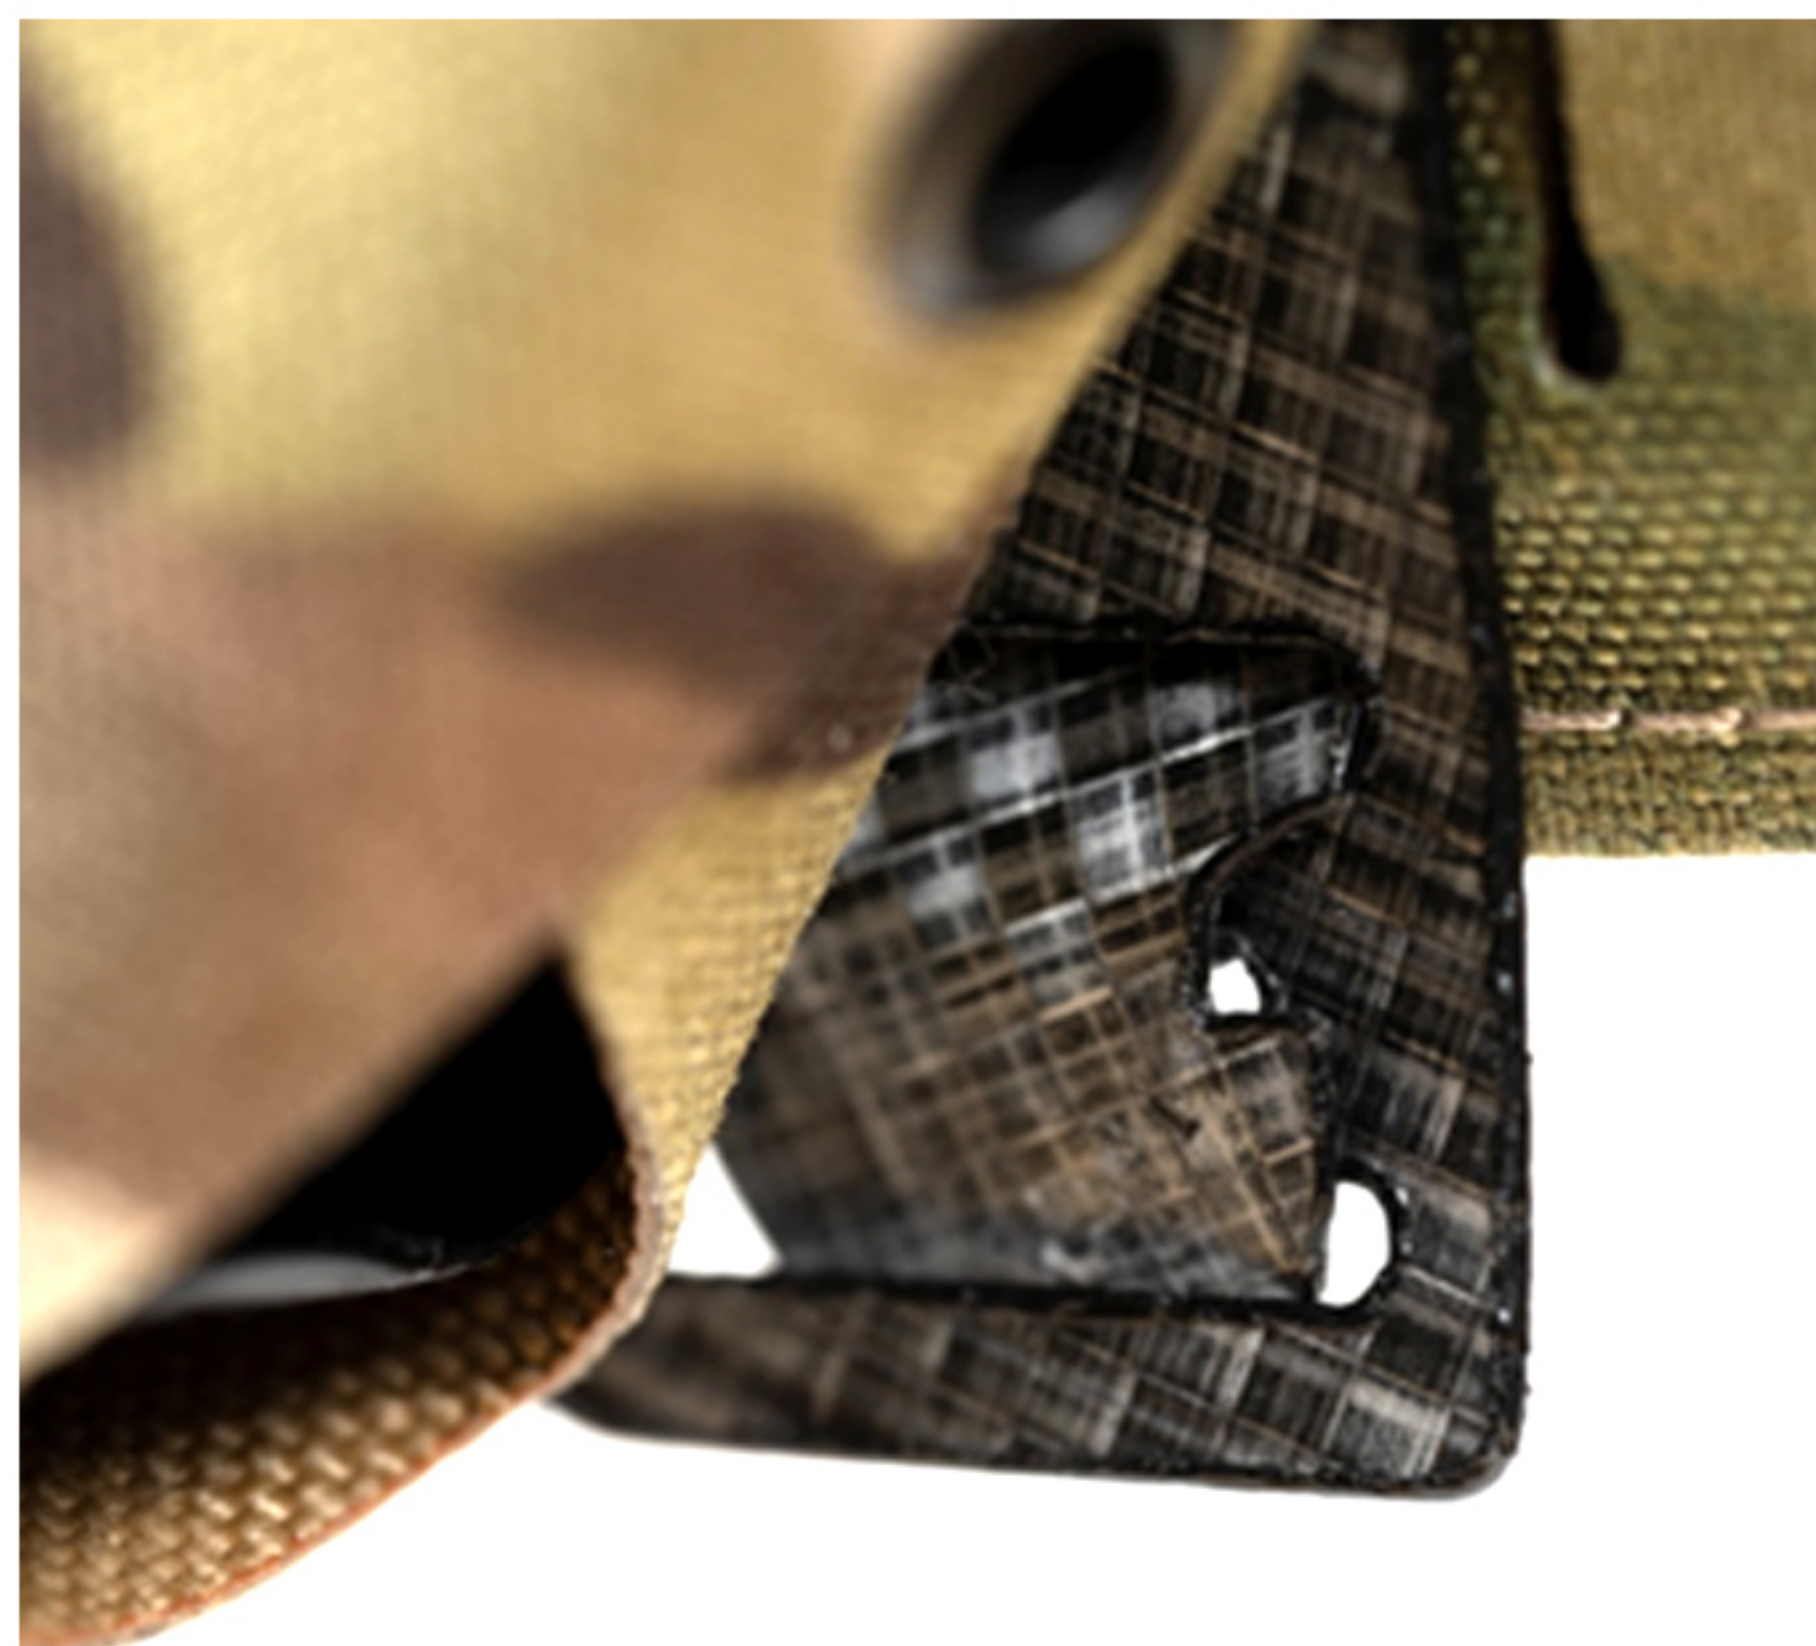

18. AND MAKE SURE BOTH SIDE ANCHORS ARE LOCKED IN.



19. YOUR 30° ADAPTER IS NOW INSTALLED!

